
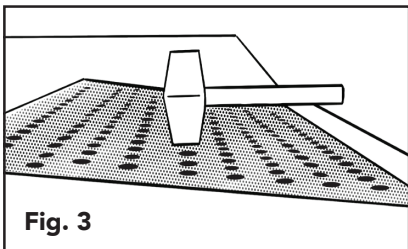
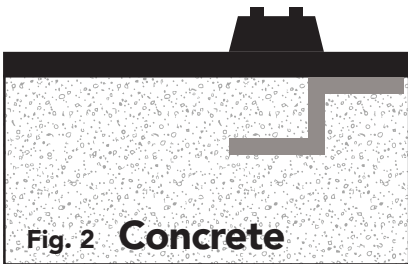


10 GAUGE GALVANIZED STEEL WET-SET INSTALLATION INSTRUCTIONS

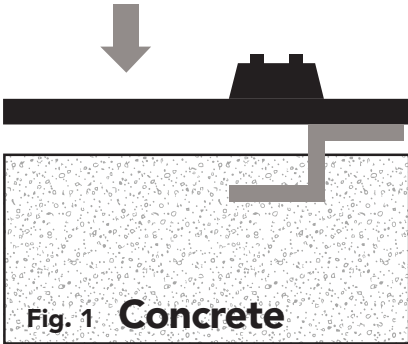


Read installation instructions thoroughly before you begin.
For Federal compliance documents [click here](#).


1. Be sure that concrete is compliant with ADA guidelines and engineer's specifications to ensure that proper installation can be achieved.
2. Slowly press the tile into concrete. **(Fig. 1 & 2) IMPORTANT: Do not stand on tile during installation.** For radius tile installation, see Radius Assembly instruction sheet
3. Using a rubber or wooden mallet, tap the entire surface of the tile to ensure consolidation around the anchors. **(Fig. 3) NOTE: Installing tiles after moisture is gone from the top will help control floating.**
4. Finish concrete to required specifications. **NOTE: Do not stand or walk on tile until concrete is fully cured.**

Installation is now complete.


CONNECTING UNITS

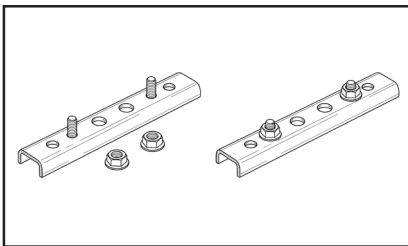

In a wet-set installation multiple units can be butted together OR connected. A connector, sold separately is available.

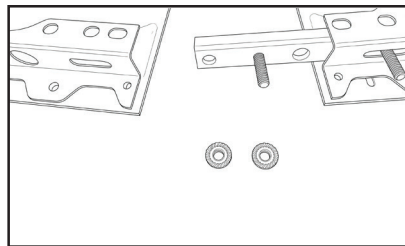

Insert connector into the Z-Bracket anchor on one unit. Butt the next unit inserting connector with bolts protruding as shown.

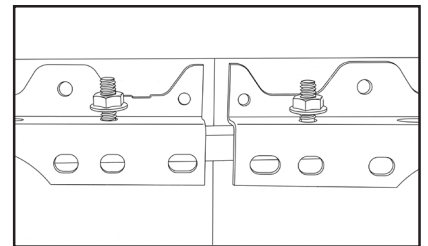

Attach nuts to bolts and tighten.

[Click here](#) for more information including an installation video tutorial. Contact us at 888-960-8897 with questions.