10 GAUGE GALVANIZED STEEL WET-SET TACTILE WARNING DELINEATOR (TWD) INSTALLATION INSTRUCTIONS

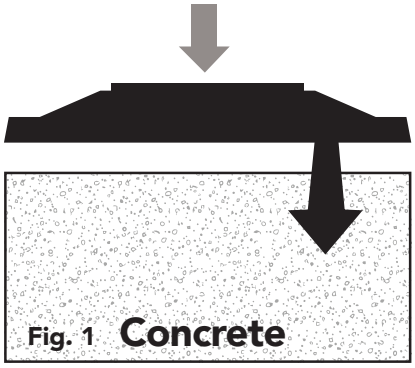


Fig. 1

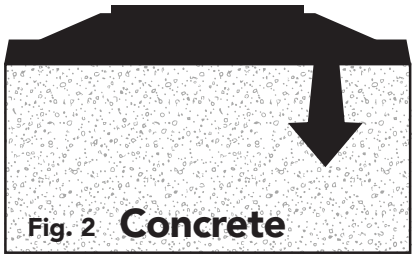
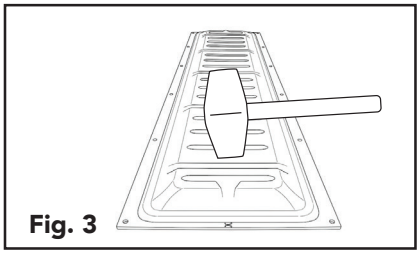


Fig. 2


Fig. 3

Read installation instructions thoroughly before you begin.
For Federal compliance documents **click here**.

1. Be sure that concrete is compliant with ADA guidelines and engineer's specifications to ensure that proper installation can be achieved.

2. Slowly press the tile into concrete. **(Fig. 1 & 2)**
   IMPORTANT: Do not stand on tile during installation.

3. Using a rubber or wooden mallet, tap the entire surface of the tile to ensure consolidation around the anchors**. (Fig. 3)**
   NOTE: Installing tiles after moisture is gone from the top will help control floating.

4. Finish concrete to required specifications. **NOTE: Do not stand or walk on tile until concrete is fully cured.**

   Installation is now complete.

Click here for more information including an installation video tutorial.
Contact us at 888-960-8897 with questions.