TufTile®

GALVANIZED STEEL WET-SET TACTILE DIRECTIONAL INDICATOR (TDI) INSTALLATION INSTRUCTIONS

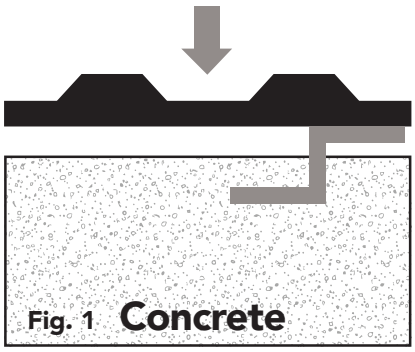

Fig. 1

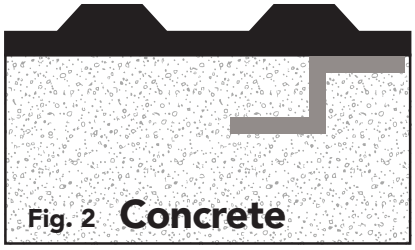

Fig. 2

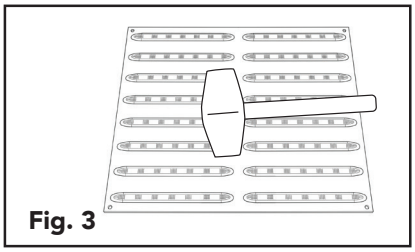

Fig. 3

Read installation instructions thoroughly before you begin.
For Federal compliance documents click here.

1. Be sure that concrete is compliant with ADA guidelines and engineer's specifications to ensure that proper installation can be achieved.

2. Slowly press the tile into concrete. **(Fig. 1 & 2) IMPORTANT: Do not stand on tile during installation.**

3. Using a rubber or wooden mallet, tap the entire surface of the tile to ensure consolidation around the anchors. **(Fig. 3) NOTE: Installing tiles after moisture is gone from the top will help control floating.**

4. Finish concrete to required specifications. **NOTE: Do not stand or walk on tile until concrete is fully cured.**

Installation is now complete.

CONNECTING UNITS

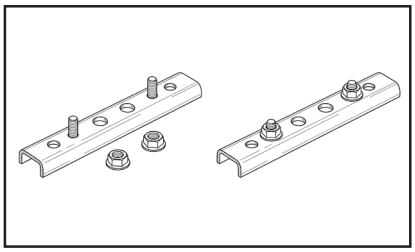

In a wet-set installation multiple units can be butted together OR connected. A connector, sold seperately is available.

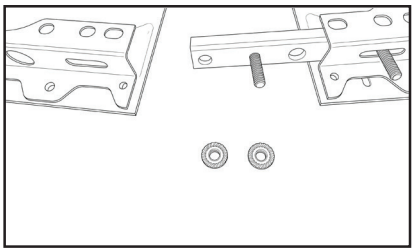

Insert connector into the Z-Bracket anchor on one unit. Butt the next unit inserting connector with bolts protruding as shown.

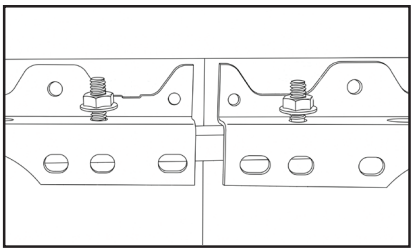

Attach nuts to bolts and tighten.

Click here for more information including an installation video tutorial. Contact us at 888-960-8897 with questions.